

## QUICK GUIDE

### MAKE A VOICE CALL

To make a call from your SAILOR 150 terminal, dial

**00 <country code> <phone number> #**

Example: Thrane & Thrane A/S in Denmark:  
**00 45 39558800 #**

To make a call to the terminal, dial  
**+870 <mobile number>**

If the mobile number is listed in the web interface, you can look it up by selecting **PHONE BOOK > Mobile numbers**.

If the number is not listed, refer to your airtime subscription. We recommend using the web interface to save the mobile number for future reference. See the User Manual for details.

### MAKE A LOCAL CALL

You can make local calls between phones connected to the same terminal.

To make a local call to an IP handset, dial the number of the IP handset (e.g. **0501**) followed by **#**.

To make a local call to an analog phone, dial **0301** followed by **#**.

For information on allocation of local numbers, refer to the User Manual.



### ACCESS THE INTERNET

To access the Internet, do as follows:

1. Connect the LAN cable between your computer and the SAILOR 150 terminal.
2. Start up your computer.
3. Open your browser.  
If your data connection is automatically enabled, you should now have access to the Internet.  
If not, proceed to the next step.
4. Enter the IP address of the SAILOR 150 web interface in the address field.  
The default IP address is **192.168.0.1**.  
With the built-in web interface you can set up and configure the SAILOR 150.

5. From the Dashboard of the web interface, click the **Start Standard** link under **PROFILES ON LAN** to start your data connection manually.

A Standard (Background) connection to the Internet is established. You should now be able to enter a web site or check your e-mail.

For further details refer to the SAILOR 150 User Manual.

**THRANE IP HANDSET:** You can start and stop data sessions in the terminal using a connected Thrane IP Handset with the local number 0501 (master handset).

Do as follows:

1. From the **BGAN** menu, select **Connect**.
2. Use the left/right keys to find the network user group for the connection you want to start or stop.
3. Use the down key to highlight the **Standard** connection.
4. Press **Start** to start the connection, or press **Stop** to stop the connection.